

ACTCAP Grounding Connector

CAT No. **AL-ACG-GN-C**

To be sold only with installation instructions

Installation Instructions


Use for Grounding Terminal Only

1. Turn off power before installing or removing connectors.
2. Strip insulated wires 1" (25.4 mm).
Note: "Through" wire must be stripped full length.
3. Place "Through" wire in connector first (See illustrations).
4. Insert other wires in normal manner.
 - (a) Hold ends even.
 - (b) Pre-twisting is unnecessary.
 - (c) Screw on connector - push wires firmly into connector when starting.

Listed as a Pressure-Type Grounding Wire Connector on the following
SOLID COPPER TO COPPER CONDUCTOR wire combinations:

For UL Listed and CSA Certified

2 #12	3 #14	1 #10 W/2 #14	2 #12 W/1 #14
3 #12	4 #14	1 #10 W/3 #14	2 #12 W/2 #14
4 #12	1 #10 W/1 #12	1 #12 W/1 #14	2 #12 W/3 #14
5 #12	1 #10 W/2 #12	1 #12 W/2 #14	3 #12 W/1 #14
2 #14	1 #10 W/1 #14	1 #12 W/3 #14	

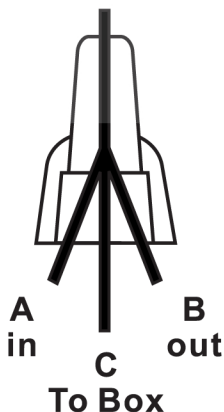

Typical Example:

- A. System grounding wire
- B. System grounding wire
- C. "Through" wire between device and box ground

Note: If "through" wire is a jumper, be sure wire extends below skirt 6" (15.2 cm) minimum.

Contact Industrial Hardware & Specialties
 with your wire accessory needs.
 973-684-4010
industrialhardware.com

