

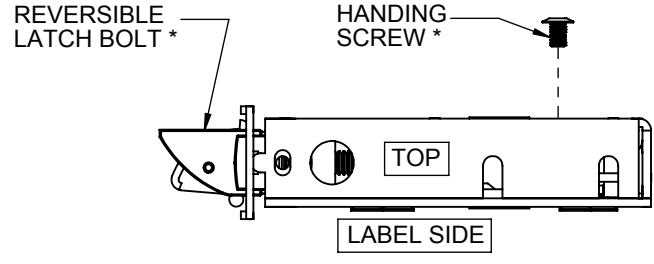
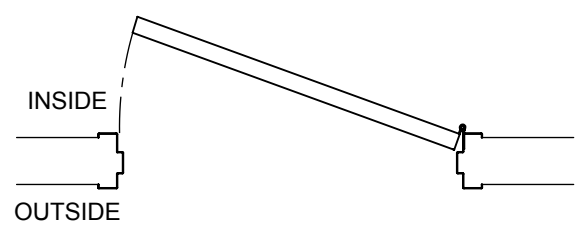




REVISIONS		
REV.	DESCRIPTION	DATE
01	ORIGINAL RELEASE	11/28/2007

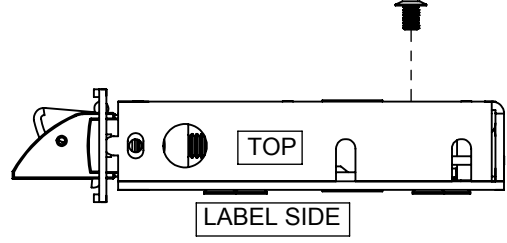



**RH - RIGHT HAND DOOR**

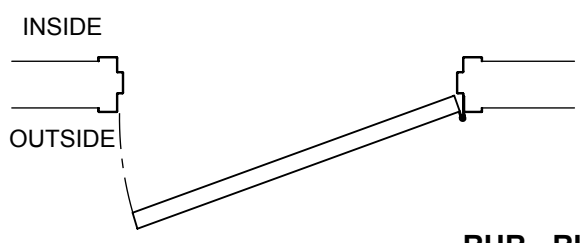

**RHR - RIGHT HAND REVERSE DOOR**

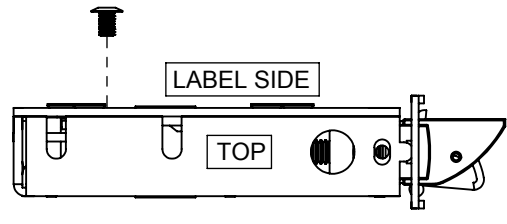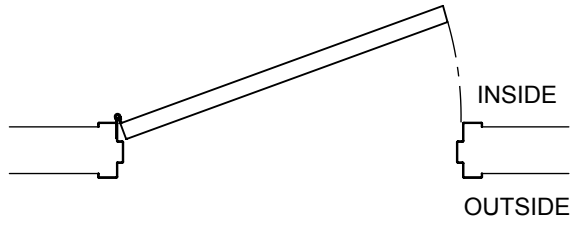

**LH - LEFT HAND DOOR**

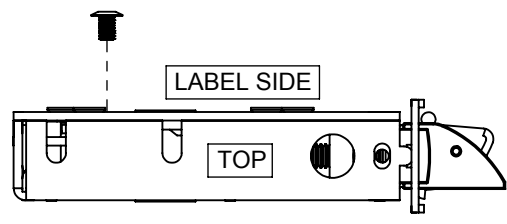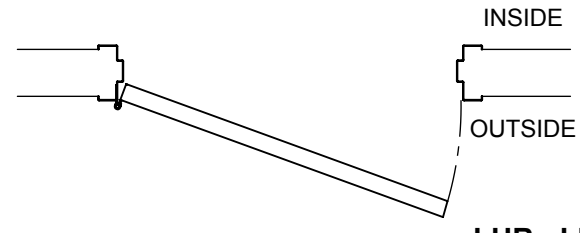

**LHR - LEFT HAND REVERSE DOOR \*\***

REFER TO THE MORTISE LOCK INSTALLATION INSTRUCTIONS FOR FURTHER DETAILS ON CHANGING THE HANDING.

NOTE: THE LOCK HANDING SCREW MUST ALWAYS BE ON THE INSIDE OF THE DOOR FOR PROPER OPERATION OF THE LOCK.

\* TO PROPERLY CHANGE HANDING, BOTH THE REVERSIBLE LATCH BOLT AND HANDING SCREW MUST BE SET PROPERLY. TO USE THIS GUIDE, ORIENT THE LOCK CASE AS SHOWN ABOVE. THE TERM "LABEL SIDE" REFERS TO THE SIDE WITH THE "HOW TO CHANGE LOCK HANDING" STICKER.

\*\* THE LOCK COMES FROM THE FACTORY PRESET WITH THE SCREW INSTALLED ON THE LABEL SIDE. IF REQUIRED, REMOVE THE SCREW AND RE-INSTALL ON THE OPPOSITE SIDE OF THE LOCK CASE (I.E. RH AND RHR REQUIRE THIS CHANGE).



**PROPRIETARY & CONFIDENTIAL**  
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF HAGER COMPANIES. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF HAGER COMPANIES IS PROHIBITED.

HAGER RESERVES THE RIGHT TO MAKE DESIGN CHANGES WITHOUT NOTICE. CALL HAGER ENGINEERING AT 1-800-325-9995 FOR THE LATEST REVISION DATE OF TEMPLATE.

MATERIAL	Material <not specified>	
FINISH	-	
DO NOT SCALE DRAWING		

DRAWN	TJS	8/13/07
ENG. APPR.	-	-
Q.A.		
TOLERANCES:		
FRACTIONAL: ±0.015"		
ANGULAR: MACH: ± 1° BEND: ±1°		
TWO PLACE DECIMAL: ±0.01"		
THREE PLACE DECIMAL: ±0.004"		

3800		MORTISE LOCK HANDING GUIDE	
SIZE	DWG. NO.	REV.	
<b>A</b>	I-LS00109	01	
SCALE: 1:4	WEIGHT: 3.02	SHEET 1 OF 1	