

THE HANDING.

NOTE: THE LOCK HANDING SCREW MUST ALWAYS BE ON THE INSIDE OF THE DOOR FOR PROPER OPERATION OF THE LOCK.

- TO PROPERLY CHANGE HANDING, BOTH THE REVERSIBLE LATCH BOLT AND HANDING SCREW MUST BE SET PROPERLY. TO USE THIS GUIDE, ORIENT THE LOCK CASE AS SHOWN ABOVE. THE TERM "LABEL SIDE" REFERS TO THE SIDE WITH THE "HOW TO CHANGE LOCK HANDING" STICKER.
- THE LOCK COMES FROM THE FACTORY PRESET WITH THE SCREW INSTALLED ON THE LABEL SIDE. IF REQUIRED. REMOVE THE SCREW AND RE-INSTALL ON THE OPPOSITE SIDE OF THE LOCK CASE (I.E. RH AND RHR REQUIRE THIS CHANGE).



PROPRIETARY & CONFIDENTIAL THE INFORMATION CONTAINED

IN THIS DRAWING IS THE SOLE IN THIS DRAWING IS THE SOLE
PROPERTY OF HAGER
COMPANIES. ANY REPRODUCTION
INPART OR AS A WHOLE WITHOUT
THE WRITTEN PERMISSION OF
HAGER COMPANIES IS PROHIBITED.
HAGER COMPANIES IS PROHIBITED.

WITHOUT NOTICE
CALL HAGER
ENGINEERING AT
1-800-325-9995
FOR THE LATEST
REVISION DATE
OF TEMPLATE.

HAGER RESERVES THE RIGHT TO MAKE DESIGN CHANGES WITHOUT NOTICE.

MATERIAL Material <not specified=""></not>
FINISH -
DO NOT SCALE DRAWING

DRAWN TJS 8/13/07 ENG. APPR. TOLERANCES: FRACTIONAL: ±0.015" ANGULAR: MACH: ± 1° BEND: ±1° TWO PLACE DECIMAL: ±0.01" THREE PLACE DECIMAL: ±0.004"

3800
MORTISE LOCK HANDING GUIDE

DWG. NO A 01 I-LS00109 SCALE:1:4 WEIGHT: 3.02 SHEET 1 OF 1