


INSTALLATION INSTRUCTIONS

1. Check Doorway Size:

Finished Doorway Width (2 Door) = 2 Door Widths less 1" (25.4mm)
 Finished Doorway Width (3 Door) = 3 Door Widths less 2" (50.8mm)
 Finished Doorway Height = Door Height + 1- 3/4" (44.4mm)


Narrow Track
 (1-1/2" (38.1mm) center to center)
 Use "A" and "B" Hangers

Wide Track
 (1- 3/4" (44.4mm) center to center)
 Use "B" Hangers on 1- 3/8" (34.9mm) Doors

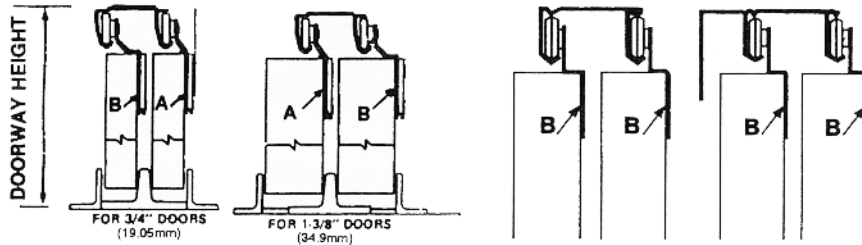

2. Mount Track and Attach Hangers

Note: In sets containing both "A" and "B" hangers, when hanging 1-3/8" (34.9mm) thick doors, use "A" hangers on front door and "B" hangers on rear door. For 3/4" (19.05mm) thick doors, use "B" hangers on front door and "A" hangers on rear door.

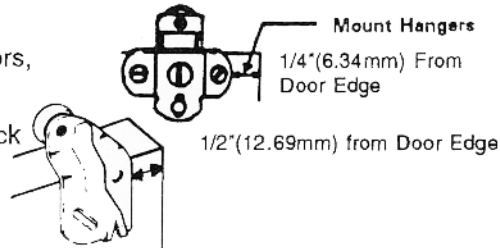

3. Hang Doors. Mount rear door first by tilting door back and resting hangers on rear rail.

4. Adjust Door to Square with Sides of Doorway.


Micro-Adjust Hangers

Loosen two mounting screws, turn nylon cam with screwdriver, tighten screws.



One Piece Hangers

Loosen two mounting screws, rotate hanger with screwdriver and tighten screws.

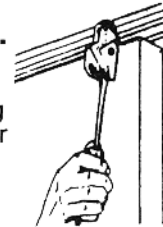


5. Install Door Guide(s) where doors overlap.


(Adjustable Style)



(Fixed Style)

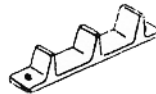

6. Install Stops (optional) and Pulls

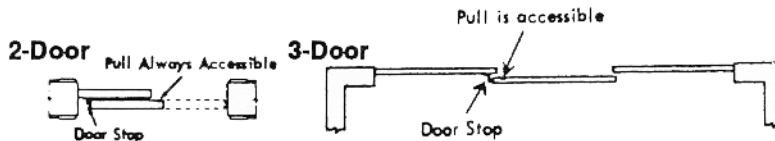

CLOSET DOOR HARDWARE
 HAGER HINGE CO. St. Louis, MO 63104 U.S.A.
 (314) 772-4400

Form 8621-H