


#### Sliding Door Hardware – 9675 & 9676 - By-Pass Installation Instructions I-SD00320

CONTENTS		9675	9676	
1.	TRACK (9602)	1	1	4. 1
2.	CARRIER	4 (9605)	4 (9606)	4. 9. 0 1.
3.	QUICK RELEASE PLATE (9610)	4	4	
4.	FLOOR GUIDE (9353)	1	1	10.
5.	#8X5/8" PTHS	16	16	
6.	#8X3/4" PPHS	2	2	6. 2.
7.	#8X1-1/2" PPHS	3	3	8
8.	#8X1" PPHS	16	16	Sam Maller (Second
9.	DOORSTOP (9880)	1	1	(a) Marine (a) (b) (b) (b) (b) (b) (b) (b) (b) (b) (b
	(sold separately)			5.
10	). PULL	2	2	<b>F M 1</b> . <b>3</b> . <b>3</b> .
	(Sold separately)			S S S S S S S S S S S S S S S S S S S

## **1** PREPARE OPENING

### OPENING HEIGHT MAX = DOOR HEIGHT + 2-1/2''OPENING HEIGHT MIN = DOOR HEIGHT + 2-1/4''

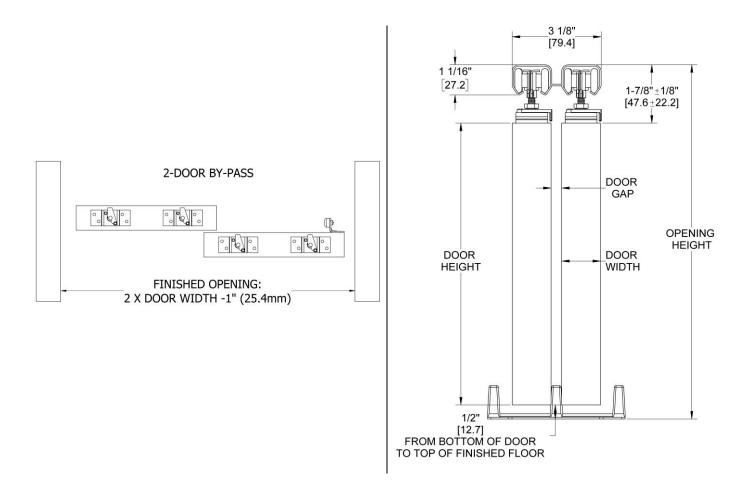





#### Sliding Door Hardware – 9675 & 9676 - By-Pass Installation Instructions I-SD00320

## **2** INSTALL TRACK AND HANGERS


- Center track in opening and secure with (#8 x 5/8") screws
- Leave a 1" gap between right end of track and door frame to allow carrier removal
- Center quick release plates on door thickness
- Mount left plate edge 1" from near left door edge
- Mount right plate edge 2-3/4" from near right door edge
- Secure Carriers onto door with (#8 x 1") screws

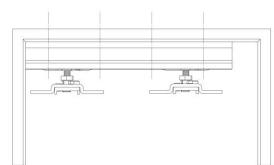

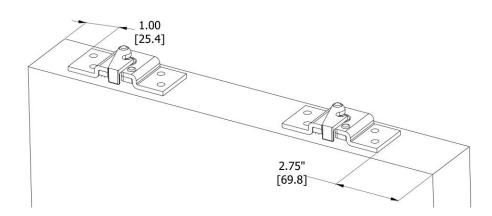

# **3** HANG DOORS

- Open quick release latches on brackets
- Slide door onto carrier screws and close hatch
- Repeat for front door on front rail

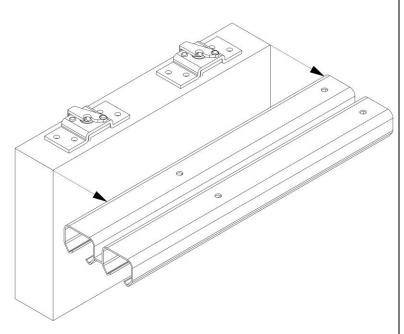

## **4** ADJUST AND FINISH

- Adjust carriers so door is square with frame
- Install door guides in center of opening, where doors overlap
- Drill appropriate dimensioned hole to mount door pull (optional)
- Install stops (optional)

