



INSTALLATION FOR 9821 SERIES TRACK

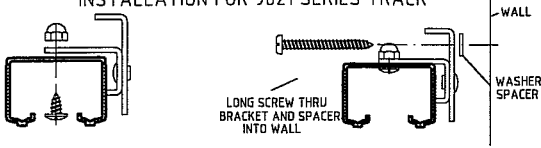


1. DRIVE SHORT SCREW THRU TRACK INTO BRACKET USING HAND SCREWDRIVER UNTIL SNUG. DO NOT OVER TIGHTEN
2. HAND THREAD ACORN NUT OVER SCREW POINT.
3. ATTACH TRACK TO WALL WITH SPACER WASHER BETWEEN BRACKET AND WALL.

INSTALLATION FOR 9821 SERIES TRACK

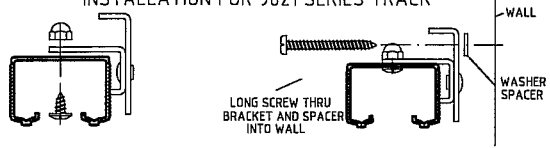


1. DRIVE SHORT SCREW THRU TRACK INTO BRACKET USING HAND SCREWDRIVER UNTIL SNUG. DO NOT OVER TIGHTEN
2. HAND THREAD ACORN NUT OVER SCREW POINT.
3. ATTACH TRACK TO WALL WITH SPACER WASHER BETWEEN BRACKET AND WALL.

INSTALLATION FOR 9801 SERIES TRACK

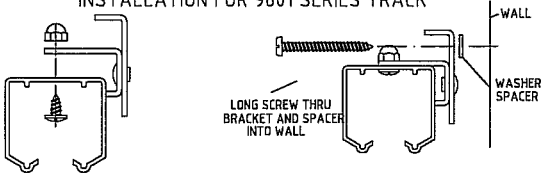


1. DRIVE SHORT SCREW THRU TRACK INTO BRACKET USING HAND SCREWDRIVER UNTIL SNUG. DO NOT OVER TIGHTEN
2. HAND THREAD ACORN NUT OVER SCREW POINT.
3. ATTACH TRACK TO WALL WITH SPACER WASHER BETWEEN BRACKET AND WALL.

INSTALLATION FOR 9801 SERIES TRACK

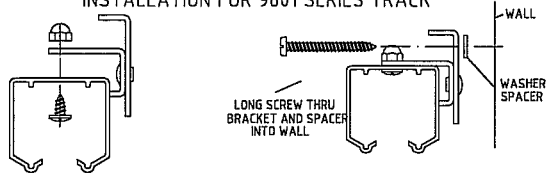

1. DRIVE SHORT SCREW THRU TRACK INTO BRACKET USING HAND SCREWDRIVER UNTIL SNUG. DO NOT OVER TIGHTEN
2. HAND THREAD ACORN NUT OVER SCREW POINT.
3. ATTACH TRACK TO WALL WITH SPACER WASHER BETWEEN BRACKET AND WALL.

INSTALLATION FOR 9599/9601 SERIES TRACK

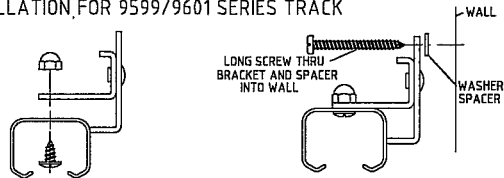

1. DRIVE SHORT SCREW THRU TRACK INTO BRACKET USING HAND SCREWDRIVER UNTIL SNUG. DO NOT OVER TIGHTEN
2. HAND THREAD ACORN NUT OVER SCREW POINT.
3. ATTACH TRACK TO WALL WITH SPACER WASHER BETWEEN BRACKET AND WALL.

9900-INST

INSTALLATION FOR 9599/9601 SERIES TRACK



1. DRIVE SHORT SCREW THRU TRACK INTO BRACKET USING HAND SCREWDRIVER UNTIL SNUG. DO NOT OVER TIGHTEN
2. HAND THREAD ACORN NUT OVER SCREW POINT.
3. ATTACH TRACK TO WALL WITH SPACER WASHER BETWEEN BRACKET AND WALL.

9900-INST



HAGER 139 Victor Street, St. Louis MO, 63104 Phone(800)325-9995 Fax(800)782-0149